

 


# GLIDE

Where Style Meets Function

Hello! Thanks for purchasing this Authentic Pop Sonic product. For questions about your product please call Pop Sonic customer services at (800) 772-9174 or email [help@shoppopsonic.com](mailto:help@shoppopsonic.com).

### Product features

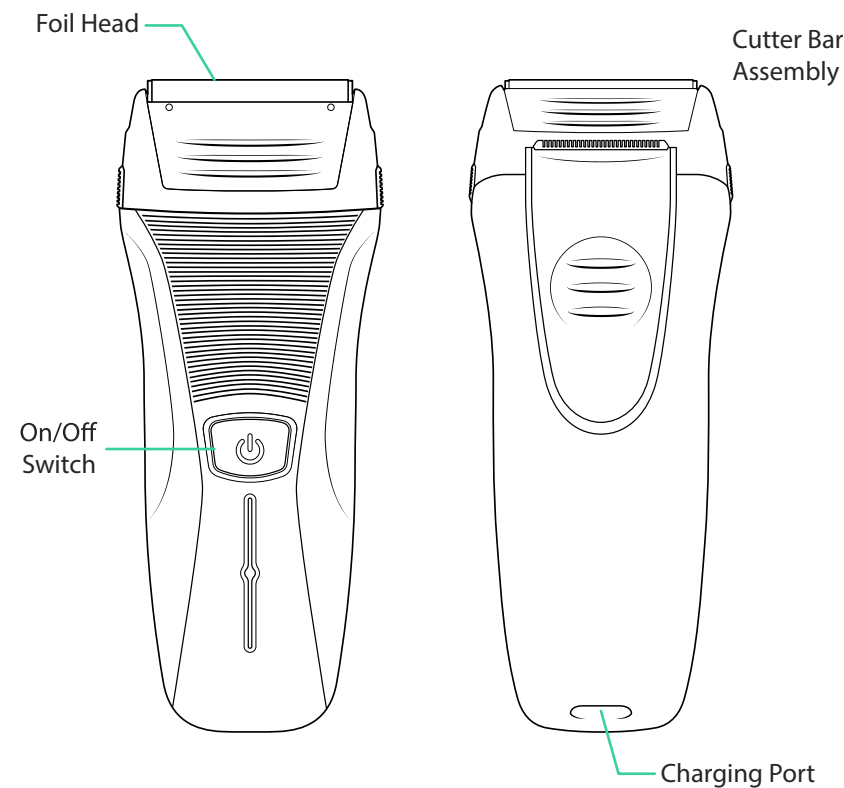

### Getting Started

1. If you are a first time electric shaver user, please keep in mind there will be about a 2 week adjustment while your skin adapts to the way an electric shaver functions.
2. Before using, charge your shaver for about 2 hours or until the charging light turns off.
3. Once fully charged, your shaver should last for around 60 minutes of shaving time.
4. When fully charged, disconnect shaver from charging cord and store charging cord in a dry, safe place .
5. For instructions on shaving techniques, please see "Shaving Techniques" section of this manual.
6. When finished shaving, replace protective cover and store in a dry safe place.
7. Foils are meant to be replaced every 12 months. However, if foil gets damaged, you should replace it immediately to prevent damage to your skin.
8. Be sure to take good care of your shaver by cleaning the exterior, the cutter bars (these are under the foil), and foil about every 3-4 shaves.

### Charging your Shaver

1. Remove the rubber cap on the bottom of the shaver then plug small end of cord into charging port. Plug the other end into a USB port on a USB charging plug, then plug that into a wall socket.
2. Charge your shaver as you notice it losing power or running a bit slower. The charging LED light will light up while charging and will turn off when charging is complete.

### Using your Shaver

1. Disconnect shaver from charging cord.
2. Although this shaver can shave either wet or dry skin, it is our recommendation that you clean and dry your skin before using. However, if you find it more comfortable or effective to use when your skin is wet, that is fine, too.
3. Push the on/off switch upward to turn on. Hold the shaver at a 90 degree angle to your skin and start shaving by gently applying the foil to your skin.
4. For best results, hold the shaver so both foils are in contact with your skin. However, when shaving the upper part of your lip or neck, it may be more effective to use just the top foil.
5. Shave both with and against the grain of your whiskers. With your free hand, stretch your skin taut in the path of the shaver.
6. Guide the shaver gently back and forth, primarily against the grain of your beard.  
*NOTE! Do not press the foils too hard against your skin because this could cause skin irritation and could also damage the foils of your shaver.*
7. When finished, always put the protective foil cover back on the shaver and store in a dry, safe place.

### Using the Long Hair Trimmer

Your shaver features a special long hair trimmer on the back of the shaver which engages after you push it upwards.

The long hair trimmer can be used for precise grooming of sideburns, mustaches, and beards.

 
- To use the long hair trimmer, take the protective cover off the shaver and simply push the trimmer upwards until it clicks into place. Then turn the power on and start using the long hair trimmer.

### Cleaning and Maintenance

For best results, it is recommended that you clean your shaver after a few shaves.


Shaver can be used with shaving gels or creams but special care needs to be used if this is the case. It is recommended that you rinse your shaver with warm water after every use if using gel or cream.

1. To continue cleaning, turn off shaver and unplug. Remove foil head by pressing the release buttons on the side of the shaver and lifting off the foil head.
2. Lightly tap the side of the foil head on a hard surface such as your sink to remove a majority of the stubble. Be careful not to tap the foil, only tap the harder plastic surrounding the foil. You can also use the small brush that was included with your shaver.
3. After that, rinse your foil to remove remaining stubble.
4. Before replacing foil, you may rinse your shaver blades and surrounding areas with water as well.

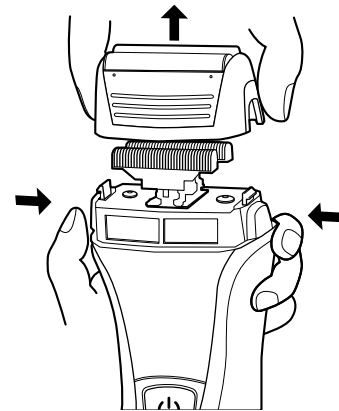

**NOTE on the Cutter Bars (blades):** Although it is not recommended, if you want to remove cutter bars to clean more thoroughly, here is what you do

 1. Turn off shaver
2. Remove foil
3. Grasp the ends of the cutter bar (do not grasp cutter bar blades)
4. Pull up to remove cutter bars

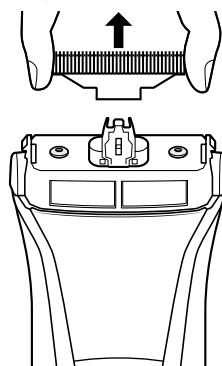

### WARNING Cutter bars are very sharp and if handled improperly they could injure you.

To replace cutter bars, push them gently back on to the cutter bar posts. Then replace the foil head by snapping it back into place.

Replacing cutter bars is recommended every 1-2 years, depending on the density of your beard and the frequency with which you use your shaver. If you notice that it is taking you longer to shave or if you start to notice more skin irritation than before, new cutter bars may be in order. Order directly from our website at [www.ShopPopSonic.com](http://www.ShopPopSonic.com).

### FAQs

Can I use clipper oil on my blades?

- A. YES you can use clipper oil to help maintain your blades, but it is not necessary.
- B. DO NOT oil anything other than cutter blades. All gearing and motors are permanently lubricated and do not require oil.
- C. Over-oiling can result in oil getting into the gearing, which could cause permanent damage to your shaver.

Can I get my shaver wet?

- A. Your shaver is water resistant but not completely waterproof. You can use it in the shower but it should not be submerged in water for any length of time.

### WARNINGS!

- Keep away from water while plugged in. Do not attempt to retrieve shaver if it falls in to water while plugged in. First, unplug from wall outlet, then retrieve shaver.
- Always unplug shaver before cleaning.
- Do not set shaver or store shaver where it can fall into water or other liquid.
- It is not recommended that children under 13 use this shaver unless properly supervised by an adult.
- Do not operate shaver if the cord or plug has been damaged. Make sure to replace damaged materials before reusing.
- Do not use the shaver if the foils are damaged. This could result in injury so replace your damaged foils before attempting to use again.
- Remember to switch shaver to off position and unplug before storing or doing maintenance on the shaver.
- Use only the parts that came with your shaver, using unauthorized parts could result in your warranty being voided.

### Lithium Battery Replacement, Disposal, and Recycling

Do not attempt to remove lithium ion battery. These types of batteries carry inherent dangers if mishandled and can explode, catch fire, or cause burns if disassembled or are damaged in any way.

Lithium batteries are subject to local disposal regulations and should not be discarded in regular trash. Check your local laws are regulations for disposal information.

Lithium batteries can be recycled. For recycling information, contact your government recycling agency, wasted disposal service, or visit online recycling resources such as [www.batteryrecycling.com](http://www.batteryrecycling.com) or [www.rbrc.com](http://www.rbrc.com).

### Warranty

POP SONIC warrants the GLIDE for a period of 1 year after the original date of purchase, against defects due to faulty workmanship or materials. For warranty claims, you must register your device and log in to your account at [www.shoppopsonic.com](http://www.shoppopsonic.com), then select the option to make a warranty claim. Our customer service department will then contact you to initiate the warranty procedure.

This warranty covers working parts. It does not cover damage due to normal usage or accidents such as dropping the device.

Other exclusions include misuse or neglect to the device. This warranty is void if any other charging cables besides the one you received is used with your device.

For any warranty claims, proof of purchase must be provided. For this reason, please keep your receipt for the duration of the warranty period.

Shipping costs are non-refundable.

### Specifications

Power system:	Cordless rechargeable lithium ion battery
Battery type:	Lithium Ion 600 mAh
Output:	DC: 5V
Charging time:	2 hours
Using time:	60-70 minutes
Waterproof:	IPX7