

Important Safety Notes

1. Users new to electric toothbrushes may experience slight numbing or other sensations after the first few uses.
2. Do not disassemble, repair, or alter the product without authorization.
3. Do not break or drop the product. If the product is defective, please discontinue use.
5. This product is compatible with **POP SONIC** brush heads only. Replacement heads can be purchased at www.shoppopsonic.com
6. If you've had oral or gum surgery in the past two months, please consult a dentist before using this toothbrush.
7. If you experience bleeding after repeated use and/or the bleeding continues for more than seven days, please consult your dentist.
8. This product is designed for cleaning your teeth, gums, and tongue, only.
9. Children should be supervised to ensure proper usage. This product is not a toy.
10. Avoid placing in high temperature conditions or in direct sunlight.

Warranty

POP SONIC warrants the Go Plus Sonic for a period of 1 year after the original date of purchase against defects due to faulty workmanship or materials. For warranty claims, you must register your device and log in to your account at www.shoppopsonic.com, then select the option to make a warranty claim. Our customer service department will contact you to initiate the warranty procedure.

This warranty covers working parts. It does not cover damage due to normal usage or accidents such as dropping the device.

Other exclusions include misuse or neglect to the device. This warranty is void if any other charging cables besides the one you received is used with your device.

For any warranty claims, proof of purchase must be provided. For this reason, please keep your receipt for the duration of the warranty period.

Unfortunately, shipping costs are non-refundable.

For questions about your product, please call **POP SONIC** customer services at (800)772-9174 or email help@shoppopsonic.com

Made by **POP SONIC, LLC**
Minneapolis, MN 55344 USA


MADE IN CHINA



GOPLUS SONIC
INSTRUCTION MANUAL

GOPLUS SONIC TOOTHBRUSH

WITH TRAVEL CASE

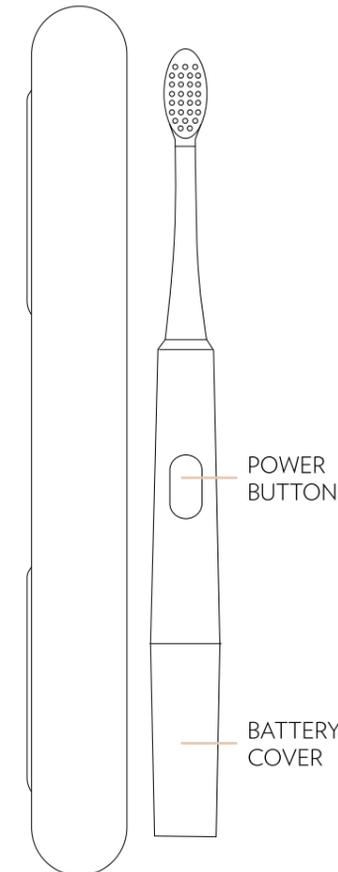

What's Included

1. Toothbrush Handle
2. Brush head with nylon bristles
3. Toothbrush Case

Requires 1 AAA battery (included)

Getting Started with Brush Modes

The first time you use the brush, press once for gentle, twice for regular, and three times to power off your toothbrush.


Gentle Mode:
18000 strokes per min

Regular Mode:
24000 strokes per min

The second time you use the brush it will remember which mode you used last and automatically start on that mode.

Using your Toothbrush

- 1 Wet the bristles and apply toothpaste.
- 2 Place toothbrush in mouth before turning on.
- 3 Turn on and glide brush slowly along your teeth. Spend about 30 seconds per quadrant shown. The toothbrush will automatic turn off after 2 minutes of cleaning.

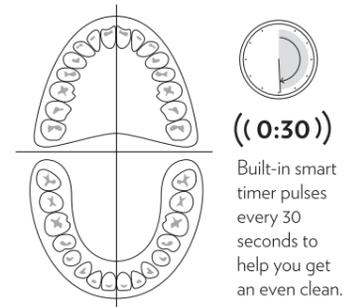


((0:30))
Built-in smart timer pulses every 30 seconds to help you get an even clean.

Using your Toothbrush (cont'd)


- 4 Rinse your toothbrush and let it air dry.
- 5 Repeat twice daily or as recommended by your dentist.

Replacing the Battery


- 1 Remove the battery cover by rotating it as shown (align to complete the arrow).

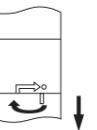

- 2 Insert one AAA battery into battery compartment correctly (make sure the battery polarity matches the label showed).

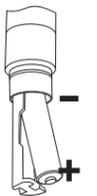

- 3 Attach battery cover by rotating it as shown (align to complete the arrow, then twist to align to dot).

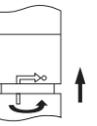

Replacing the Brush Head

To replace the brush head, gently pull it away from the handle. Press on the new head.

