

WARNINGS

Keep the adapter the dry.

Before connecting device, make sure that the voltage indicated aligns with the local power supply voltage.

Don't charge continuously for a long time. Don't charge when the temperature is lower than 32°F / 0°C or more than 104°F / 40°C. This will shorten the battery life.

Only charge device with provided and matching USB cables. Do not use any third party accessories.

Unplug the charger before cleaning shaver under water.

Do not wipe device with thinner, benzene, alcohol, or other chemicals. Clean by soft cloth with neutral lotion.

If odor, high temperature, or sounds occur during charging or usage, remove from power and stop using immediately.

Lithium Battery Replacement and Discard

Do not attempt to remove lithium ion battery. These types of batteries carry inherent dangers if mishandled and can explode, catch fire, or cause burns if disassembled or are damaged.

Lithium batteries are subject to local disposal regulations and should not be discarded in regular trash. Check your local laws and regulations for disposal information.

Lithium batteries can be recycled. For recycling information, contact your local recycling service or visit online recycling resources such as www.batteryrecycling.com or www.rbrc.com.

Warranty

Pop Sonic warrants the Moon Shaver for a period of 1 year after the original date of purchase against defects due to faulty workmanship or materials. For warranty claims, you must register your device and log in to your account at www.shoppopsonic.com, then select the option to make a warranty claim. Our customer service department will contact you to initiate the warranty procedure.

This warranty covers working parts. It does not cover damage due to normal usage or accidents such as dropping the device.

Other exclusions include misuse or neglect to the device. This warranty is void if any other charging cables besides the one you received is used with your device.

For any warranty claims, proof of purchase must be provided. For this reason, please keep your receipt for the duration of the warranty period.

Shipping costs are non-refundable.

For questions about your product, please call Pop Sonic customer services at (800)772-9174 or email help@shoppopsonic.com

**Made by Pop Sonic
Minneapolis, MN 55344 USA**

 
MADE IN CHINA

pop
SONIC



MOON SHAVER

Pop. Shave. Smooth
Personal Shaving Device

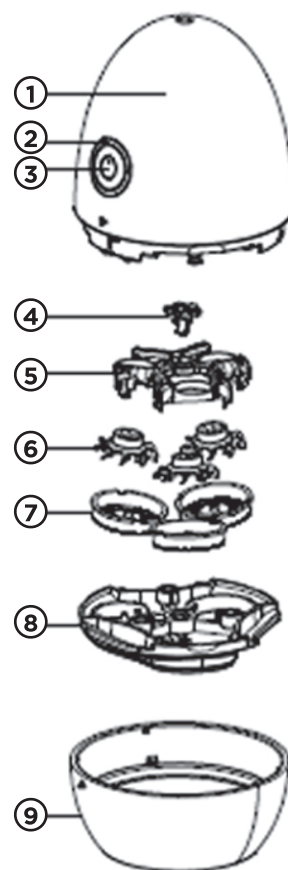

What's Included

1. Body
2. Indicator light
3. Power button
4. Pin
5. Holder
6. Rotary Blades
7. Stationary Blades
8. Blade cover
9. Base/charger cover
10. Brush
11. Charging cable
12. Charge port

Using your Moon Shaver

Indicator light shines white when on.
Indicator light blinks red when battery is low (3 to 5 minutes remaining).
Time to charge the device.

 
 
 
To charge device: connect charge port to power adapter using the provided cable, then plug power adapter into an outlet. Light will glow red while charging and turn off when ready (about 1.5 hours).

A full charge can be used for more than 60 minutes.

When the shaver is fully charged, remove the base/charger cover and press the power button. The indicator light is white. Shave hair by lightly moving device upright against the skin.

When the load is too large, locked rotor protection will be on; and the shaver will be turned off automatically.

Long press power button (3 seconds), the white light blinks and device is locked. Long press power button again (3 seconds), the white light blinks and device unlocks.

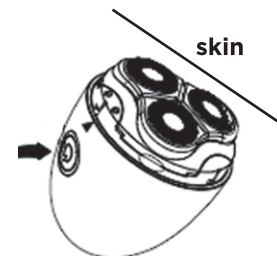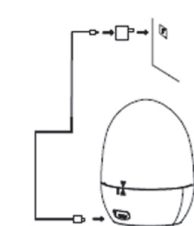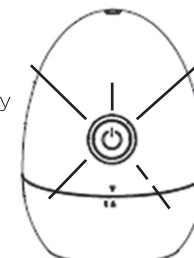

Maintenance

Make sure the shaver is turned off before cleaning.

To clean device: remove cover with blade, turn the Pin clockwise and remove Holder.

Blade assembly should separate. Brush away hair. Blade parts can be rinsed with water. Shake off excess water and allow parts to dry naturally.

To reassemble: the round blade is placed in the floating frame, and then press Holder into place. Turn Pin counterclockwise to lock.

After cleaning, drip lubricant onto blade edges, then rotate several times. Wipe excess lubricant off the outer surface of the blade.

Align arrow marks on device and base/charger, fastened clockwise.

