

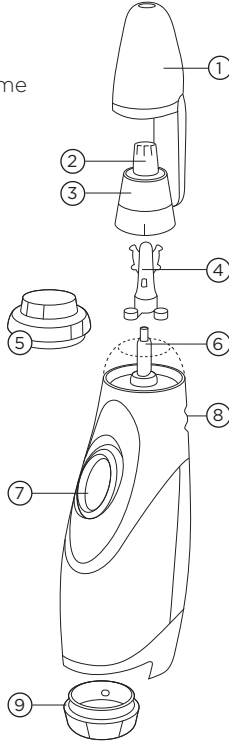 
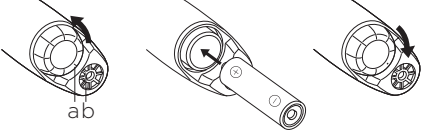 
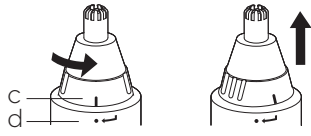 
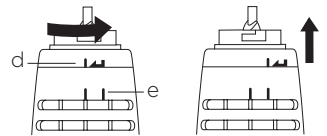 


<p>WARNINGS</p> <p>To avoid the risk of personal injury follow these instructions:</p> <p>Keep device away from children. This is not a toy.</p> <p>Insert device gently into your nostril or ear cavity. Do not push or force deep into your nostril or ear cavity.</p> <p>Before each use, check the blades for damage. Do not use device if the outer blade frame or blades are deformed or damaged.</p> <p>The blades have been precision manufactured. Do not subject them to mechanical force, impact, drop etc. Place the protective cap over the blade frame after each use.</p> <p>Trimmer is designed only for cutting nose and ear hairs. Do not use for any other purpose.</p> <p>Ensure the switch is turned off before cleaning the blades.</p> <p>Do not wipe device with thinner, benzine or alcohol. Clean by cloth with soapy water.</p> <p>Do not attempt to modify or disassemble and repair the product yourself.</p>	<p>Warranty</p> <p>Pop Sonic warrants the Nose Trimmer for a period of 1 year after the original date of purchase against defects due to faulty workmanship or materials. For warranty claims, you must register your device and log in to your account at www.shoppopsonic.com, then select the option to make a warranty claim. Our customer service department will contact you to initiate the warranty procedure.</p> <p>This warranty covers working parts. It does not cover damage due to normal usage or accidents such as dropping the device.</p> <p>Other exclusions include misuse or neglect to the device. This warranty is void if any other charging cables besides the one you received is used with your device.</p> <p>For any warranty claims, proof of purchase must be provided. For this reason, please keep your receipt for the duration of the warranty period.</p> <p>Shipping costs are non-refundable.</p>	<div></div> <div></div> <div><p>NOSE TRIMMER</p><p>Trim unwanted hair. Anywhere</p></div>
---	--	--

<p>NOSE TRIMMER</p> <p>What's included</p> <ol style="list-style-type: none">1. Protective cap2. Outer blade3. Outer blade frame4. Inner blade5. Filter6. Joint7. On/off switch8. Vent9. Battery cover <div></div>	<p>Using your trimmer</p> <p>Slide the power switch upward to power on. Carefully insert the tip of the outer blade into your nostril or ear cavity to trim hairs. Take care not to cover the vent while using your trimmer.</p> <p>Replacing the battery</p> <p>Turn the battery cover counterclockwise. Match line a with line b and pull to remove. Insert one AA (LR6) battery. Replace the battery cover and twist into place.</p> <div></div> <p>Maintenance</p> <p>Be sure that the switch is turned off before removing, replacing or cleaning the blades.</p> <p>To remove the outer blade frame, turn it and match line c with d and pull upward.</p> <div></div>	<p>Maintenance (cont'd)</p> <p>Detach the inner blade from the outer blade. Wipe the blades with a tissue to remove any cut hairs, dust, etc. Then to remove the filter, turn it and match line d with e.</p> <div></div> <p>Shake off the hair clippings.</p> <p>THE WHOLE UNIT CAN BE WASHED IN WATER. DO NOT USE BOILED WATER.</p> <p>After cleaning, replace the filter, the inner blade, and the outer blade.</p> <p>For questions about your product, please call Pop Sonic customer services at (800)772-9174 or email help@shoppopsonic.com</p> <p>Made by Pop Sonic Minneapolis, MN 55344 USA MADE IN CHINA</p>
---	--	--