

pop
SONIC



STRAWBERRY 

Made by Pop Sonic, LLC
Minneapolis, MN 55344
Made In China

WHAT YOU GET



x1 PopSonic Strawberry

 
 


x1 DC Power Charger




x1 Strawberry Stand

GET TO KNOW YOUR STRAWBERRY

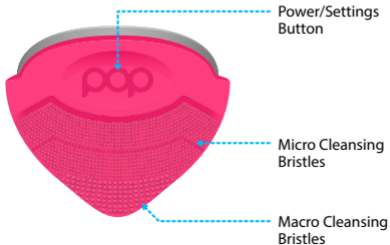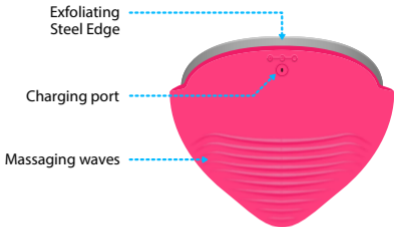


FEATURES AND USE

 - 1 To be used on both FACE and BODY.
- 2 2 Speeds - Normal and Pulse.
 - Press the "O" (Middle of the POP logo) once for normal and press again for Pulse. Press again to turn off.
- 3 Antimicrobial Food grade silicone.

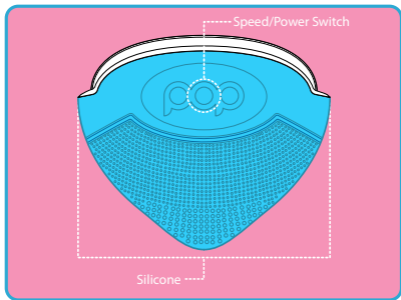


FEATURES AND USE

 - 4 The small bristles are for cleansing– use your normal facial cleanser.

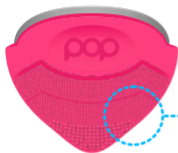


 - 5 The waves on the backside are best for massaging – use them to massage in serum/lotion or just to massage sore areas on face, head, or body.

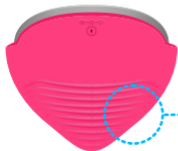


FEATURES AND USE

 - 6 The steel edge is for exfoliating – use the speed that is most comfortable for you. It is recommended that you exfoliate when your skin is wet.
- While your skin is moist (either after a shower or after spraying your skin with water) GENTLY move the Strawberry over your face at a 45 degree angle, concentrating on the areas that need exfoliating. Use light pressure to help open pores around your nose, chin, forehead, and other areas around your face. Slight redness is normal and is a sign that blood flow is increasing. The redness will fade quickly.
 - Use on any area of the face but use caution around sensitive areas like eyes.

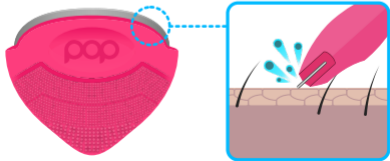

FEATURES AND USE

 - 7 Charging – the Strawberry will have a near invisible hole on the back of the device where you will show the DC pin charging being inserted.

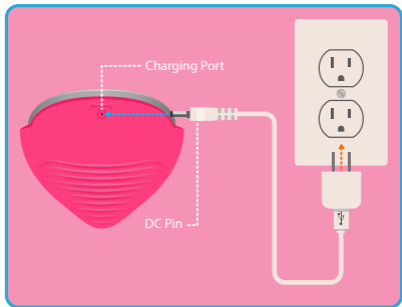

ADDITIONAL INFORMATION

- 1 While your Strawberry is waterproof, never submerge it in water or use in bath or shower.
- 2 Since the Strawberry is designed to remove skin debris, massage, and cleanse, it is important to clean it well. After using the Strawberry, clean the steel with warm water and soap, if desired. Use a dry cloth to dry the Strawberry and store in a dry safe place.
- 3 To disinfect the Strawberry, use a paper towel and apply rubbing alcohol to a towel, then wipe the steel edge thoroughly and discard the towel. Store the Strawberry in a dry, safe place.
- 4 DO NOT make contact with eyes.
- 5 Keep power cord out of water.
- 6 Keep the Strawberry away from children, it is not a toy.

SPECIFICATIONS

Materials:

Antimicrobial Food Grade
Silicone and ABS plastic

Rated Working Voltage:

DC3.7V

Weight:

57g

Battery type:

Lithium-ion 250mAh 3.7V

Charging time:

≤4 hours

Frequency:

Up to 13,000 Vibrations
per minute

Max Decibels:

65 dB

FREQUENTLY ASKED QUESTIONS

Q Why doesn't the Strawberry turn on when I press the On/Off button?

A *Battery is depleted, recharge your Strawberry.*

Q Should I use the Strawberry's Steel Edge when my skin is dry?

A *No, you should not use the Strawberry when your skin is dry because the steel cannot glide easily on dry skin and can cause irritation.*

Q Can I use my own lotion or serum with the Strawberry?

A *Yes, you should use your own lotion or serum with the Strawberry.*

Q Is it okay to use infused water on my face? (water infused with essential oils or vitamins)

A *Yes, it is ok to use water infused with essential oils or vitamins with the Strawberry.*

Q Are there videos or tutorials that show me how to use the Strawberry and other PopSonic devices?

A *Yes, visit SHOPPOPSONIC.COM to find the information that you need.*

A *There are also various videos on YouTube that may be helpful.*

Q I have other questions about my PopSonic Strawberry, how can I get in touch with someone?

A *Call our customer service center at (631) 619 7122. If you do not reach a representative, please leave us a message and we will call you back promptly.*

A *Email us directly at HELP@SHOPPOPSONIC.COM*

POP SONIC STRAWBERRY 1 YEAR LIMITED WARRANTY

POP SONIC warrants the Strawberry for a period of 1 year after the original date of purchase, against defects due to faulty workmanship or materials. For warranty claims, you must register your device and log in to your account at WWW.SHOPPOPSONIC.COM, then select the option to make a warranty claim. Our customer service department will then contact you to initiate the warranty procedure.

This warranty covers working parts. It does not cover damage due to normal usage or accidents such as dropping the device. Other exclusions include misuse or neglect to the device.

This warranty is void if any other charging cables besides the one you received is used with your device.

For any warranty claims, proof of purchase must be provided. For this reason, please keep your receipt for the duration of the warranty period.

Shipping costs are non-refundable.

DISPOSAL INFORMATION

The Strawberry should not be treated as normal household waste but should be brought to the appropriate collection point for recycling of electronic equipment.

For more information on how to recycle or dispose of this item, please contact your state or local waste disposal service.

DISCLAIMER

Users of this device use it at their own risk. Neither POP SONIC nor its' retailers assume any responsibility or liability for any injuries or damages, physical or otherwise, resulting, directly or indirectly, from the use of this device.