

# pop SONIC TRIMMER



- Painless hair removal
- Great for peach fuzz
- New and Improved!

## Battery


### Replacing the Battery:

Note: The Pop Sonic Trimmer uses one AAA battery

- 1 Remove the cap (see illustration 1)
- 2 Make sure the unit is OFF

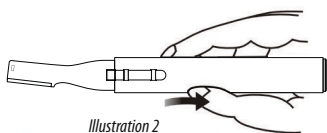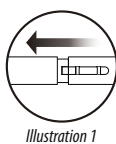

- 3 Slide the casing off (see illustration 2).
- 4 Insert the battery with the correct alignment.
- 5 Slide the casing back on.

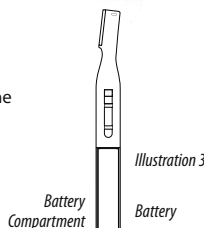

**WARNING:** The Trimmer will not work if the battery is inserted incorrectly.


### Main Head Attachment

Turn the Trimmer ON by pressing the ON/OFF switch in the direction of the arrow (see illustration 4)

Gently place the head against any hair you wish to be removed

Move the head against the direction of hair growth to begin removal.

Note: Use steps 1 - 3 for all designated areas of the body.

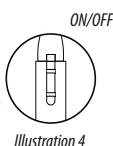


## Eyebrow Shaper Attachment

### Attachment

Note: Try the longer side of the attachment first to determine which side is appropriate.

Illustration 5

- 1 Make sure the trimmer is off before continuing.
- 2 Grip the neck of the main unit with two fingers.
- 3 Place the attachment over the main head, then push down until it snaps (see illustration 5).

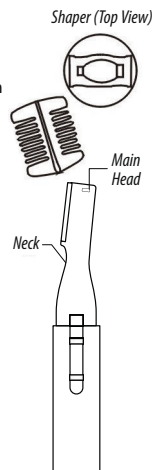

Note: Use the larger opening when attaching the shaping attachment.


### Using the Eyebrow Shaper to Comb

- 1 Attach the Eyebrow Shaper as depicted, with the appropriate side. Note: We recommend the short side.
- 2 Turn the Trimmer off.
- 3 Using the natural shape of the eyebrow, starting from the widest side, begin combing.

### Using the Eyebrow Shaper to Trim

- 1 Attach the Eyebrow Shaping Attachment as depicted, with the appropriate side. Note: We recommend the short side.
- 2 Turn the Trimmer off.
- 3 Using the natural shape of the eyebrow, starting from the widest side, begin combing.

- Be Careful not to over trim
- Use caution near eyes
- DO NOT use the trimmer on eyelashes
- For external use only.

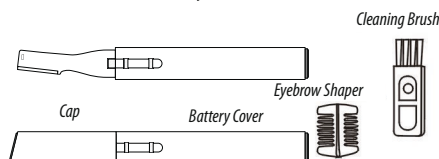


## Care & Maintenance

### Cleaning the Eyebrow Shaper

- 1 Remove the eyebrow shaper and remove any hair from its teeth with a brush.
- 2 If necessary, wash with soapy water.
- 3 Make sure the shaper is completely dry before reattaching it.

### Cleaning the Main Head Attachment

- 1 Use a the cleaning brush to wipe away any hairs (see illustration 6).

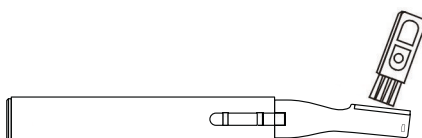

## The Pop Sonic Trimmer is Great for:

- Eyebrows
- Side Burns
- Chin Hair
- Bikini Areas
- Ears
- Toes
- Feet
- Nose
- Mustaches
- Beards
- Hands
- Fingers
- Knees
- Ankles
- Neck

## Features

- The main head can adjust to fit your body
- Painless hair removal.
- Great for removing peachfuzz and unwanted hairs.
- Replaceable AAA battery.
- Snap on cap for added protection.

## Safety Information

**READ ALL INSTRUCTIONS BEFORE USING YOUR POP SONIC TRIMMER. USE ONLY AS DIRECTED.**

- KEEP OUT OF REACH OF CHILDREN
- The Pop Sonic Trimmer is not a toy and not meant to be used by children.
- DO NOT immerse the Trimmer in water.
- The Pop Sonic Trimmer is not meant to be used as a shaver.
- When changing heads make sure the switch is in the OFF position.

Made By PopSonic, LLC  
Minneapolis, MN 55344  
Made in China  
Style #: 21417

- PopSonic customer service phone # 800-772-9174
- PopSonic email: [HELP@Shoppopsonic.com](mailto:HELP@Shoppopsonic.com)

### Warranty Guarantee & Service

POP SONIC guarantees the Trimmer for 1 year after the initial date of purchase. Defects due to faulty materials and/or workmanship will be repaired or replaced by POP SONIC when proof of purchase is provided during the warranty period. Contact our Customer Service Center at [help@shoppopsonic.com](mailto:help@shoppopsonic.com)